
 
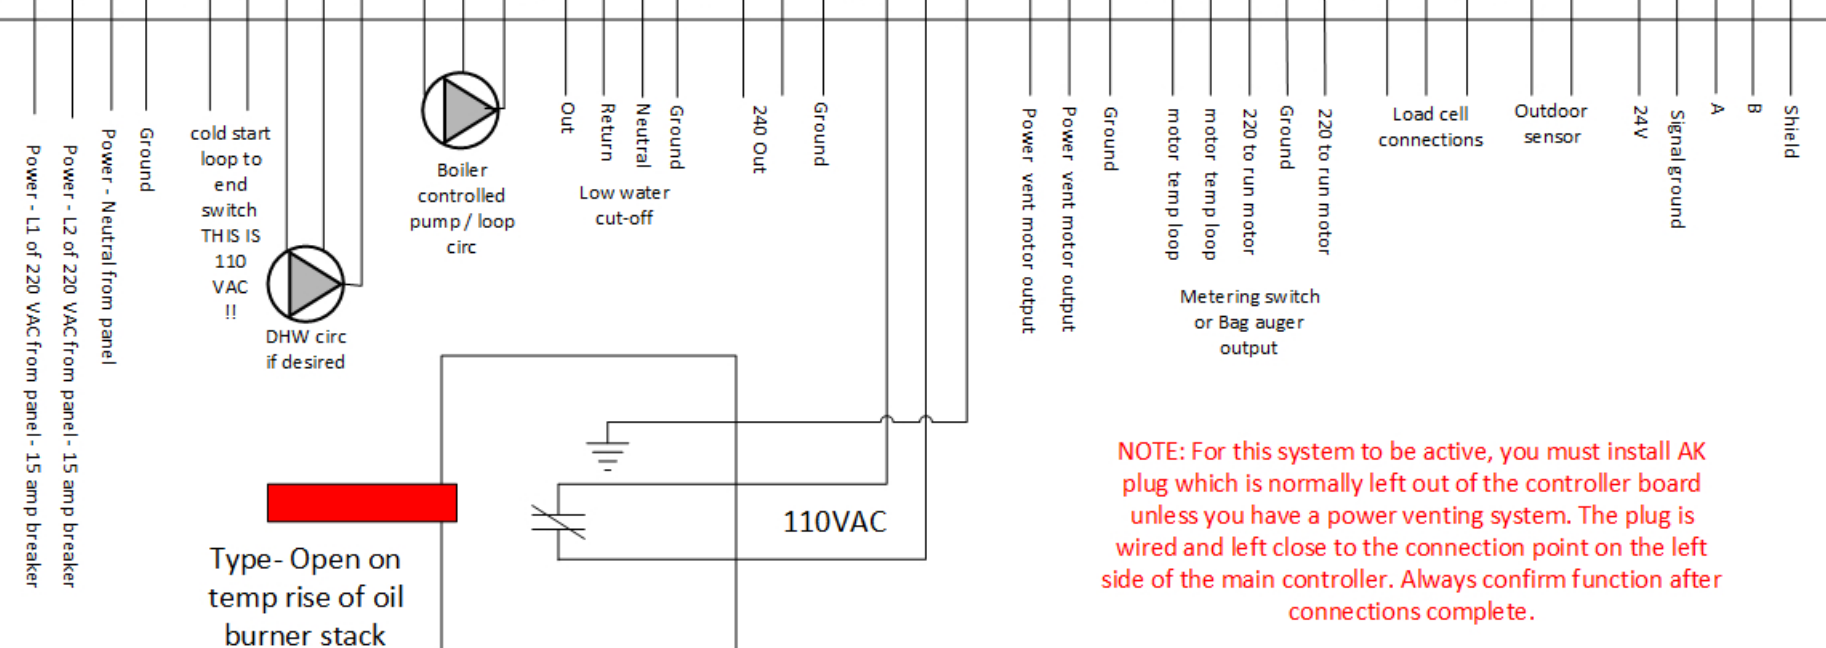



AutoPellet Terminal Box New Style

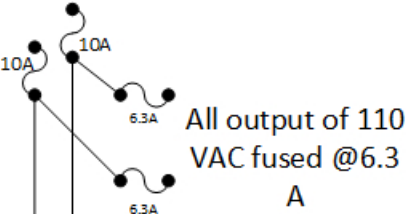

Type- Open on temp rise of oil burner stack

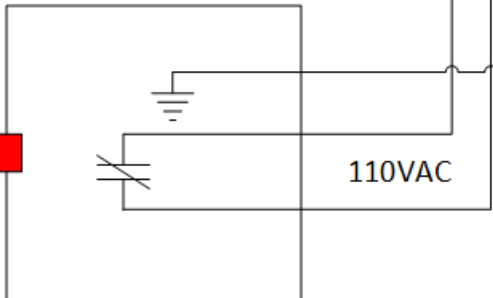

NOTE: For this system to be active, you must install AK plug which is normally left out of the controller board unless you have a power venting system. The plug is wired and left close to the connection point on the left side of the main controller. Always confirm function after connections complete.